

PFAFF

5489-H

Unterklassen-Ausstattung

Subclass parts

Composition des sous-classes

Composición de las subclases

Unterklassen-Ausstattung

Subclass organization

Equipement des sous-classes

Dotación de las subclases

Unterklasse Subclass Sous-classe Subclase	Ausführung Model Version Tipo de máquina	Nadelabstand in mm Needle gauge in mm Ecartement des aiguilles en mm Distancia entre agujas en mm	Nadelstange Needle bar Barre à aiguille Barra de aguja	Stoffschieber links ⁴ Feed dog, left Griffe gauche Elemento izquierdo del transportador inferior	Stoffschieber rechts ⁴ Feed dog, right Griffe droite Elemento derecho del transportador inferior	Stichplatte ³ Needle plate Plaque à aiguille Placa de aguja
--	---	--	---	---	---	---

-814/01-704/02-739/01-748/26 2-Nadel-Ausführung · 2-needle version

-58/05-960/11; /14	BN 46 CN 46	6,4; 7,2	91-178 073-93 ^{10/2}	91-059 726-04 ^{10/2}	91-059 199-04	91-158 295-93 ^{10/2}
--------------------	----------------	----------	-------------------------------	-------------------------------	---------------	-------------------------------

-814/01-704/02-739/01-748/26 3-Nadel-Ausführung · 3-needle version

-58/05-960/11; /14	BN 46 CN 46	3,2x3,2; 3,6x3,6	91-178 074-93 ^{10/2}	91-059 699-04 ^{10/2}	91-059 199-04	91-158 119-93 ^{10/2}
--------------------	----------------	------------------	-------------------------------	-------------------------------	---------------	-------------------------------

 
⁴ = Ausführung angeben
= Indicate model
= Préciser la version
= Indiquez el tipo de máquina

⁵ = Nähmuster einsenden
= Submit sewing sample
= Joindre échantillons de couture
= Envíese muestra de costura

¹⁰ = Nadelabstand
= Needle gauge
= Ecartement des aiguilles
= Distancia entre agujas



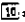
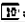




^{10/2} = Nadelabstand bei Bestellung angeben
= State needle gauge on order
= Indiquer écartement des aiguilles à la commande
= Indiquez en los pedidos la distancia entre agujas

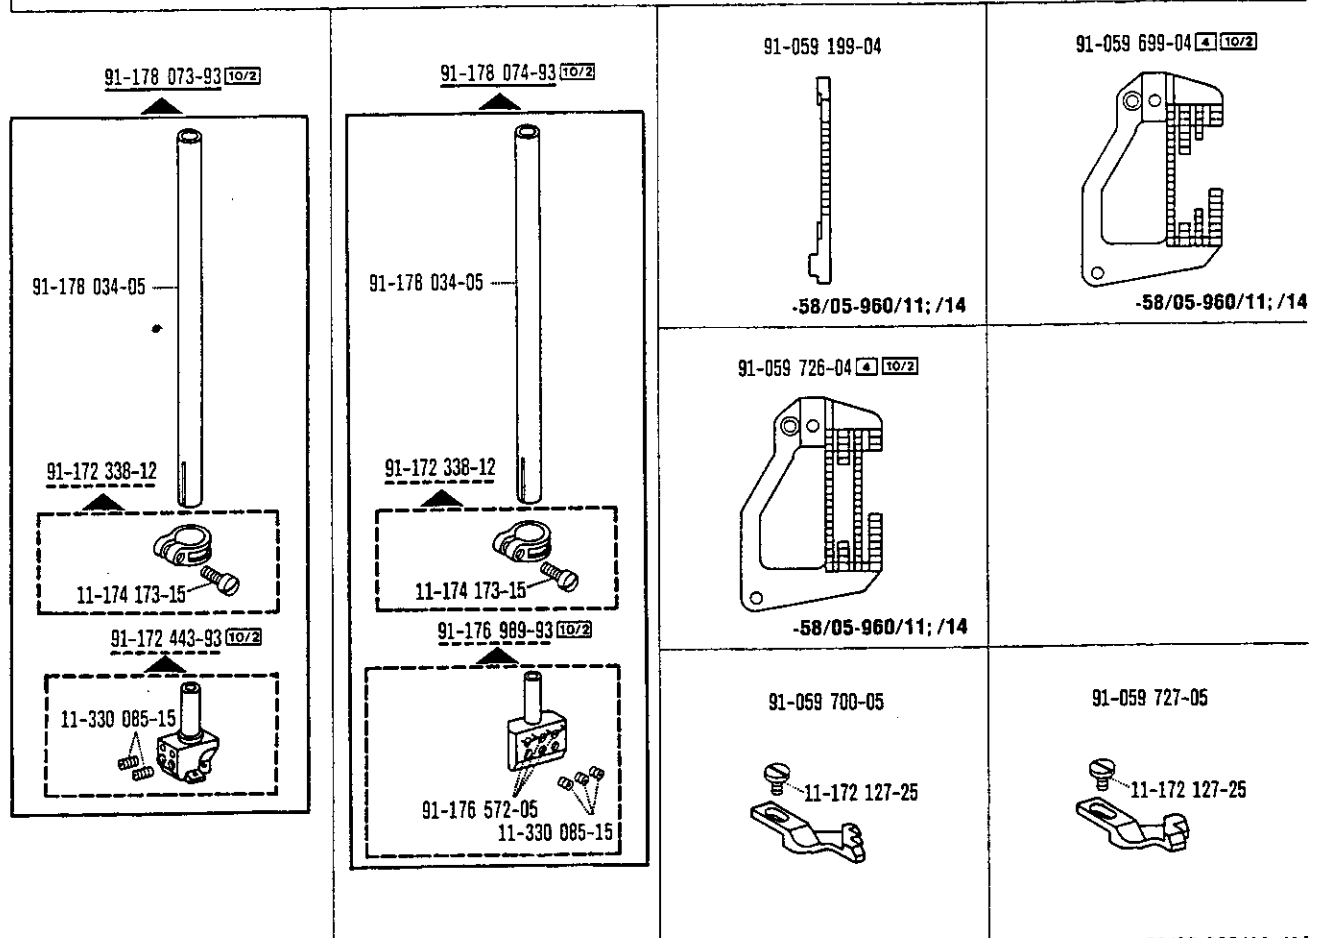

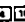

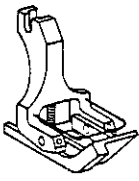








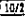

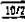Unterklassen-Übersicht/ Table of subclasses/ Table des sous-classes/ Tabla de subclases

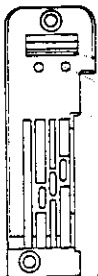

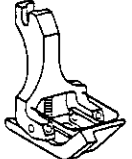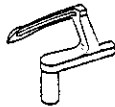 
Equipement des sous-classes
Unterklassen-Ausstattung

Dotación de las subclases
Subclass organization

 
Unterklasse Subclass Sous-classe Subclase	Ausführung Model Modelo Tipo de máquina	Maschine Presser/foot Pie presser/soles Pie prensatelas	Apparat Attachment Appareil Aparato	Kettenschnitzgatter, vorn Looper, front Boucleur avant Carrillo delantero para punto cadeneta	Kettenschnitzgatter, mitte Looper, center Boucleur centre Carrillo centro para punto cadeneta	Kettenschnitzgatter, hinten Looper, rear Boucleur arrière Carrillo posterior para punto cadeneta	Nadelhülse Needle guard Garde-aiguille Guardaaguja	Abdeckplatte Cover plate Plaque de recouvrement Placa cubierta
-814/01-704/02-739/01-748/26		Machine à 2 aiguilles · Máquina de 2 agujas						
-58/05-960/11;/14	BN 46 CN 46	91-157 499-93  	91-056 977-93	91-169 867-05  = 6,4 mm 91-169 868-05  = 7,2 mm		91-169 877-05  = 6,4 mm 91-169 878-05  = 7,2 mm	91-059 727-05	91-178 051-91
-814/01-704/02-739/01-748/26		Machine à 3 aiguilles · Máquina de 3 agujas						
-58/05-960/11;/14	BN 46 CN 46	91-157 143-93  	91-056 977-93	91-176 980-05	91-176 981-05	91-176 982-05	91-059 700-05	91-178 051-91

<p>91-158 119-93</p>  <p>91-158 122-01 11-210 076-15 (2 x) 91-158 120-04</p> <p>-58/05-960/11;/14</p>	<p>91-158 295-93</p>  <p>91-158 122-01 11-210 076-15 (2 x) 91-158 295-04</p> <p>-58/05-960/11;/14</p>	<p>91-157 143-93  </p>  <p>-58/05-960/11;/14</p>	<p>91-157 499-93  </p>  <p>-58/05-960/11;/14</p>
<p>91-169 867-05</p>  <p>-58/05-960/11;/14</p>	<p>91-169 868-05</p>  <p>-58/05-960/11;/14</p>	<p>91-169 877-05</p>  <p>-58/05-960/11;/14</p>	<p>91-169 878-05</p>  <p>-58/05-960/11;/14</p>
<p>91-176 980-05</p>  <p>-58/05-960/11;/14</p>	<p>91-176 981-05</p>  <p>-58/05-960/11;/14</p>	<p>91-176 982-05</p>  <p>-58/05-960/11;/14</p>	

Unterklassen-Ubersicht/ Table of subclasses/ Table des sous-classes/ Tabla de subclases

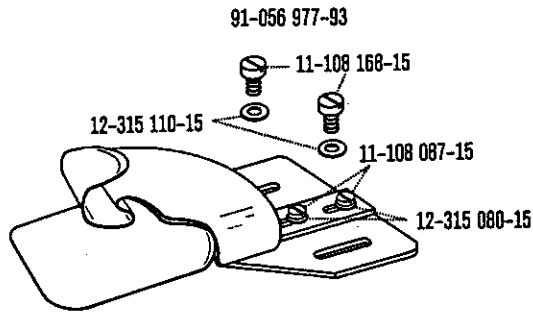

-58/05-960/11;/14

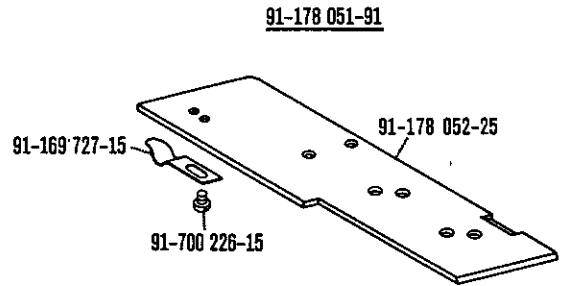

-58/05-960/11;/14